


THE SHARPER IMAGE®

Massaging Foot Spa with Hot Water Jets & Bubbles

HF775 Instructions

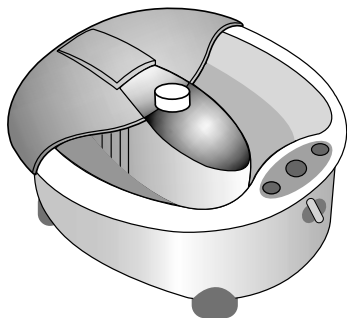

Read and save these instructions.

Dear Sharper Image Customer,

Thank you for your purchase of a Sharper Image product. We appreciate your business very much.

Please accept my personal assurance of your complete satisfaction with this product's quality and performance. We offer generous return privileges and excellent warranties on all our products.

For more than 25 years, The Sharper Image has shared the fun of discovering innovative products that make life better and more enjoyable. We've been in business a long time because we are an exciting place to shop and — just as importantly — we strive to deliver great customer service that exceeds your expectations.

Enjoy your purchase!

Respectfully,

A handwritten signature in cursive script that reads "Richard".

Richard Thalheimer

Founder, Chairman and Chief Executive Officer

*Call 1-800-344-4444 for 24-7 ordering and customer service,
or go to **www.sharperimage.com**, our complete online store.*

Table of Contents

Important Safety Instructions.....	5
Warnings.....	5
Caution	8
Grounding Instructions.....	9
Danger.....	9
Operation	11
Maintenance and Care	14
Storage	14
Warranty.....	15

Important Safety Instructions

When using an electrical appliance, basic precautions should always be followed. Read all instructions before using this appliance.

Warnings

To reduce the risk of electric shock:

- Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Do not use while bathing or in the shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Connect appliance to a properly grounded outlet.
(See Grounding Instructions.)

To reduce the risk of burns, fire, electric shock or injury:

- Appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off attachments.

Warnings

- To disconnect, turn all controls to **OFF**, then remove plug from outlet.
- Do not attempt to plug or unplug unit while feet are in water.
- Do not operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock or injury.
- Close supervision is necessary when this appliance is used by, on or near children and physically challenged or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- Never operate this appliance if it has a damaged cord or plug, is not working properly, has been dropped or damaged or dropped in water. Return appliance to a service center for examination and repair.
- Do not carry appliance by supply cord or use cord as a handle.
- Keep cord away from heated surfaces.
- Never operate appliance with the air openings blocked. Keep air openings free of lint, hair and other debris.

Warnings

- Never operate on a soft surface, such as a bed or couch, where air openings may be blocked.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate while sleeping or drowsy.
- Always unplug when filling or moving the unit.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not stand on or in the Massaging Foot Spa. Use only while seated. Place feet in massager and remove feet from massager only when in a seated position.
- Use heated surface carefully as it may cause serious burns. Do not use on sensitive skin areas or where there is poor circulation.
- Generally, this unit should be used no longer than 30 minutes at a time. Extensive use may cause the unit to overheat. Should this occur, discontinue use and allow the unit to cool before resuming operation.

Caution

- The Massaging Foot Spa should not be used in the following cases without consulting a physician: tuberculosis, benign or malignant tumors, hemorrhages, inflammations of the skin, phlebitis and thrombosis, open or fresh wounds, bruises, broken skin or varicose veins, undetermined calf pain or joint pain.
- Consult a physician if you have any questions regarding therapeutic use of this product. Do not use before consulting your physician if you are experiencing unexplained pain or swollen muscles or have had a serious muscular injury.
- Keep away from children.
- Discontinue use of the Massaging Foot Spa if pain increases or swelling occurs after use.
- If you are using a pacemaker or if you are pregnant, please consult a physician before using.
- This appliance is designed only for personal, non-professional use.

Save These Instructions

Grounding Instructions

Unit must be grounded. If it malfunctions or breaks down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product's cord features an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate three-prong outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Danger

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided. If plug will not fit into an outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120V circuit and has a three-prong grounding plug as shown in Figure A. A temporary adapter, as shown in Figure B, may be used to connect this plug to a two-prong receptacle if a properly grounded outlet is not

Danger

available. The temporary adapter should only be used until a qualified electrician can install a properly grounded outlet (Figure C). The green colored tab extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw (Figures D & E).

Note: Temporary adapters, such as the type mentioned above, cannot be used in Canada.

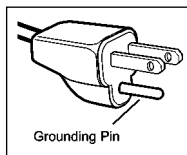


Figure A

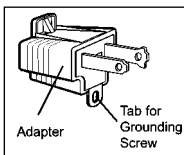


Figure B

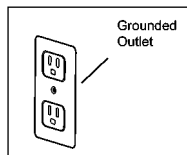


Figure C

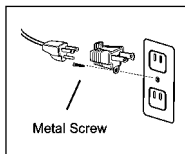


Figure D

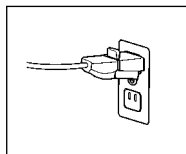



Figure E

Operation

Figure F.

Caution:

Do not fill water over the fill line.

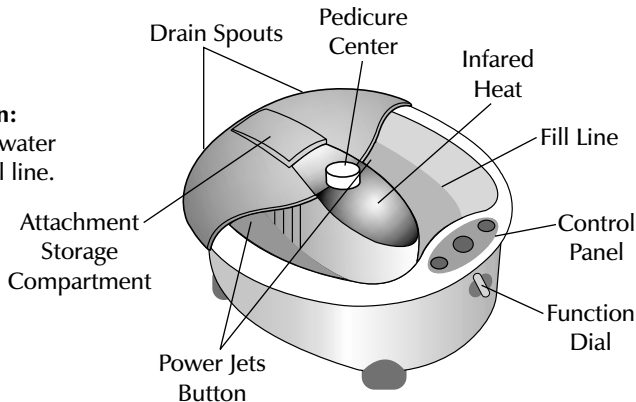

1. Ensure the unit is unplugged before filling with water.
2. Place unit on floor and fill with warm or cold water. Do not fill above water level indicator. (See Figure F.)

CAUTION: Never turn the unit on unless there is water in it.

3. Plug the unit into a standard wall outlet. Never plug or unplug unit while your feet are in water.
4. To select a feature, press the corresponding **BUTTON**

Operation

(described below) on the spa's control panel. To turn the feature OFF, press the **BUTTON** again.

- Infrared Heat — Provides deep penetrating heat therapy to the soles of your feet.
- Jet Action — Ten powerful jets provide invigorating action to the bottom of your feet.
- Water Heat — Heats cold water to warm in a few minutes. A red LED illuminates when the feature is active.

Note: Water heating function works only when the jet action function is active.

5. Sit down and place your feet in the spa.
6. To activate the Power Jets feature, press feet down on the **POWER JETS** button. The jets are now working at full capacity.

Note: To keep this function active, your feet must continue pressing the button.

7. To select a Jet Action style, switch the **FUNCTION DIAL** from water jets to bubble jets.
8. To use the Infrared Heat function, place a foot over the

Operation

infrared surface located on the center console. Apply more or less pressure on the surface to adjust for comfort.

9. To use the Pedicure Center, choose one of five spinning attachments described below and place it on the central spinning hub. Press your foot down on the attachment to activate spinning.
 - Pumice Stone — Smooths and softens dry skin on the heels and soles of feet.
 - Two Massaging Nodes — Provides a relaxing massage from the balls of your feet to your heels.
 - Two Brushes — One soft, one firm, to clean and exfoliate skin.
10. For a deep penetrating massage, slide feet back and forth over the acupressure surface on the Massaging Foot Spa floor and the infrared surface.
11. When finished using the Massaging Foot Spa, turn off all functions and unplug the unit.
12. To empty the water, tip unit, only allowing water to spill out along the drain spouts. DO NOT pour water over the control panel. This may cause serious harm to the unit. (See Figure F.)

Maintenance and Care

- Unplug the unit and allow it to cool before cleaning.
- Rinse unit with water. Do not submerge in water.
- Wipe surfaces only with a soft, damp cloth.
- Do not use strong chemical cleaners.
- Periodically straighten cord if it becomes twisted.

Storage

- Unplug the unit from the outlet and allow to cool.
- Place attachments in storage compartment. (See Figure F.)
- Store in its box or a clean, dry place.
- To avoid breakage, do not wrap the power cord around the unit.
- Do not hang the unit by the power cord.

WARRANTY

What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts

This warranty runs for 90 days from the date of original purchase.

What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or loss or damage to batteries or removable parts.

What The Sharper Image Will Do

The Sharper Image will repair any defects in materials or workmanship. In the event repair is not possible, The Sharper Image will either replace this product with one of similar features and price, or refund the full purchase price of the product, whichever you prefer.

How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department
2901-A West 60th Street
Little Rock, AR 72209

If you have questions please feel free to contact our customer service representatives at 1-800-344-5555 or by email at care@sharperimage.com.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

Copyright 2003

Sharper Image Corporation
650 Davis St., San Francisco, CA 94111
(415) 445-6000

Shop online: **www.sharperimage.com**

Due to continuing improvements, actual product may differ slightly from the product described herein.
V1 08/03